



Tronsmart Halo 210



Portable Party Speaker

User Manual

Model: P3030


Thank you for purchasing the Tronsmart Halo 210 Portable Party Speaker. Please read the user manual before use and keep it handy for future reference. If you have any additional questions or comments, please contact us by email at: support@tronsmart.com.

1 Package Contents

- 1 x Tronsmart Halo 210 Portable Party Speaker
- 1 x Aux-in Cable
- 1 x AC Power Cord
- 1 x Quick Start Guide
- 1 x Warranty Card


2 Button Configuration

EN

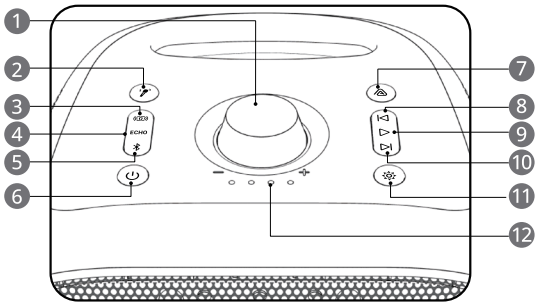

1	Volume Wheel	7	Auracast/Auracast Indicator
2	AI Vocal Removal/ AI Vocal Removal Indicator	8	Previous Track
3	Stereo Pairing/ Stereo Pairing Indicator	9	Play/Pause

4	Echo/Echo Indicator	10	Next Track
5	Bluetooth/Bluetooth Indicator	11	Light Switch/ Light Switch Indicator
6	Power On/Power Off	12	Battery Level Indication

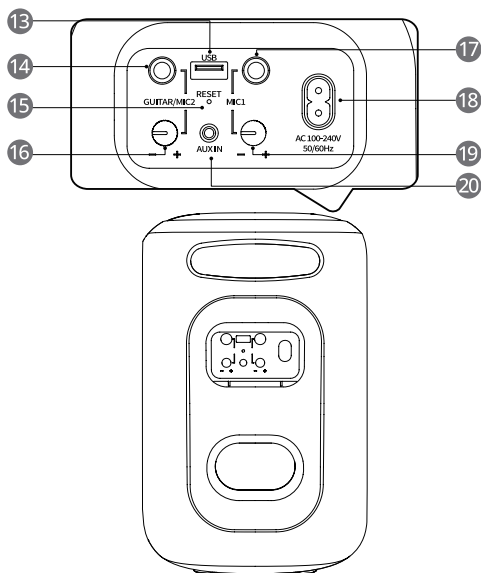

EN


13	USB-A Port	17	Mic Port
14	Mic/Guitar Port	18	AC Charging Port
15	*Reset Hole	19	Volume Knob for Microphone
16	Volume Knob for Microphone/Guitar	20	Aux-in Port

*Poke for 2s with a needle or card pin to reset.

3 How to Use

1. Turn On/Turn Off

 Press for 2s to turn on/turn off.

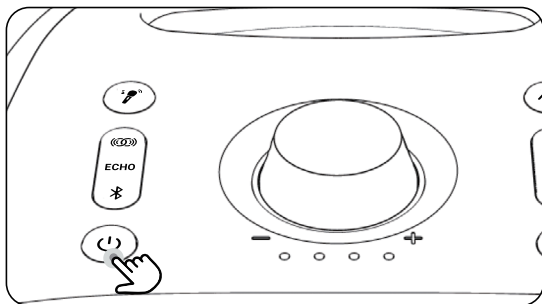


 On: Press for 2s

 Off: Press for 2s

2. Bluetooth Connection

 
Search & click 'Tronsmart Halo 210' to connect.

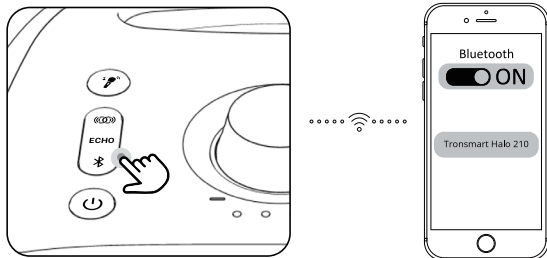

3. Enter/Exit Stereo Pairing Mode


Connect 2 Tronsmart Halo 210 speakers to enjoy powerful stereo sound.

- 1) Turn on both speakers. Please make sure either speaker has entered pairing mode.

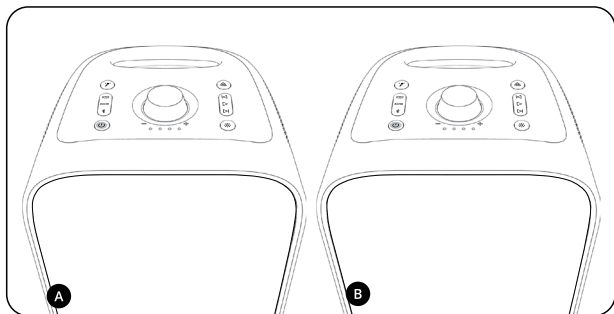


EN

- 2) Press the 'Stereo Pairing' Button once on both speakers to enter stereo pairing mode, the Stereo pairing indicator of host speaker flashes quickly while the vice one stays on. (Press once to exit)

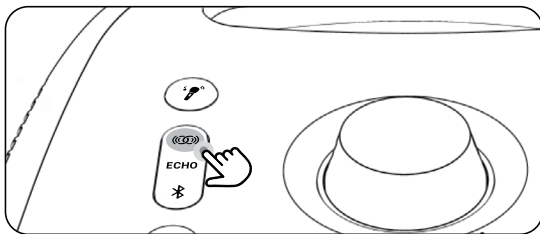


 - 3) If paired successfully, the Bluetooth indicator of host speaker will flash quickly while vice one will off.
- 4) Search & click 'Tronsmart Halo 210' to connect.

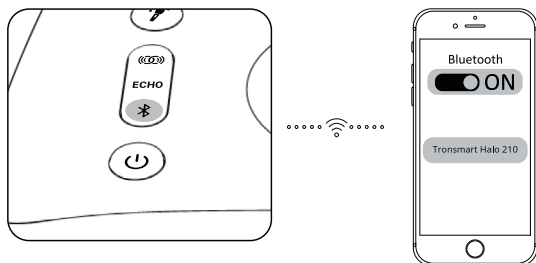


4. Dual Audio Modes

- 1) Search & click 'Tronsmart Halo 210' to connect with device A.

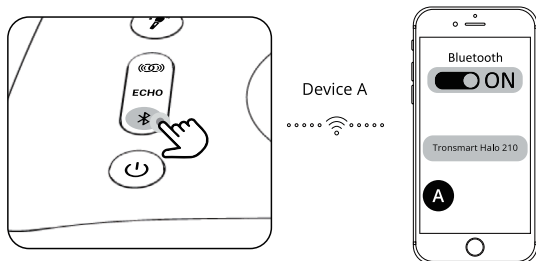


2) Press the Bluetooth Button once on the Tronsmart Halo 210.

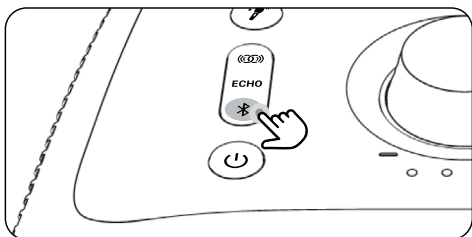

3) Tronsmart Halo 210 will re-enter pairing mode.


4) Search & click 'Tronsmart Halo 210' to connect with the device B.

EN

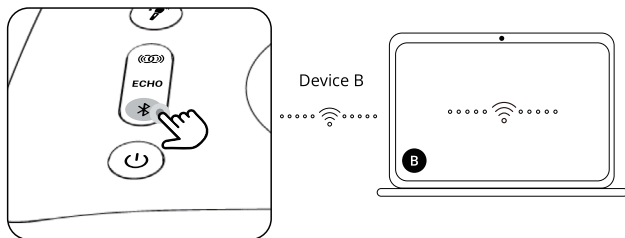


5. Auracast Mode

With one speaker connected to a device, press the Auracast button on Tronsmart speakers with Auracast function to synchronize audio.

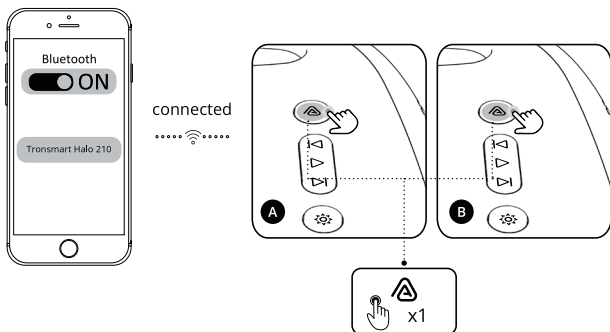

	Press Once	Enter/Exit Auracast Mode
	Stays White	Auracast Pairing/Connected
	Stays Blue	Host Speaker(Auracast Connected)
	Indicator Off	Vice Speaker(Auracast Connected)
	Press 'Bluetooth' Button for 2s on Vice Speaker	Exit Auracast Mode and Re-enter Bluetooth Pairing Mode

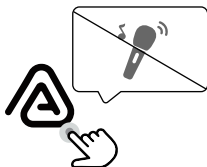 

Tip: Auracast is built for multi-device audio sharing. Vocal Removal and AI Lead Vocal are temporarily disabled in Auracast mode. Please switch to Standalone or Stereo Pairing mode to unlock all karaoke features.

6. Operation

	Press for 2s to turn on
	Press for 2s to turn off
	Press once to skip to next track
	Rotate clockwise to turn up volume
	Rotate counterclockwise to turn down volume
	Press once to play/pause music playing
	Double press to switch playing modes among Bluetooth, U-disk & Aux-in in turn
	Press once to skip to previous track
	Press once to enter Auracast broadcasting mode
	Press once to exit Auracast broadcasting mode
	Press once to cycle through light, semi, and full vocal removal in turn
	Press once to enter/exit stereo pairing mode
	Press for 2s to disconnect from device
	Press for 8s to restore to factory setting.
	Press once to switch lighting modes
	Press for 2s to turn off lighting modes
ECHO	Press once to cycles through the echo modes (Echo I , Echo II & Echo III) or turn off
	Rotate clockwise to turn up Mic/Guitar Volume
	Rotate counterclockwise to turn down Mic/Guitar Volume

7. USB-A Power Bank Function

This speaker carries an USB-A charge out function that will automatically detect your device and begin to charge it when the charging cable is plugged into the USB-A charge port. The output power is up to DC 5V/2A. In order to maintain stable music playing performance, it's not recommended to use the music and power bank function at the same time.

8. Aux-in Mode

Simply connect the speaker with your non-Bluetooth device via the 3.5 mm audio jack cable.

Note: After plugging in an audio cable, the speaker will automatically switch to Aux-in mode.

9. USB Flash Drive Mode

The speaker will play the music from your U-disk when plugging into the slot.

10. Auto Power Off

The speaker will auto-off after 30 minutes if it does not pair with any device or play any music. When on low battery, the speaker will power off automatically as well.

11. Restore to Factory Setting

Press 'Bluetooth' button for 8s.

12. Tronsmart App

Download 'Tronsmart App' via Google Play or App Store.



Apple & the Apple logo are trademarks of Apple Inc.



Google Play & the Google Play logo are trademarks of Google Inc.

How to Connect Tronsmart App?

1. Turn on Bluetooth setting on your device, search & click 'Tronsmart Halo 210' to connect.
2. Open 'Tronsmart' App & allow to access Bluetooth on your device.
3. Slide to find out 'Halo 210' & click to connect.
4. If connected successfully, you could customize Equalizers, lights, etc.

13. Specifications


Model	P3030
Bluetooth Version	6.0
Audio Codec	SBC
Bluetooth Compatibility	A2DP/AVRCP
Transmission Distance	Over 30m/98ft
Frequency Range	40Hz-20KHz
Playtime(Varied by Volume Level & Audio Contents)	LED off: Up to 18 Hours(on a 50% Volume)
Battery Capacity	DC 14.8V/4500mAh
Input Power	100-240V~ 50/60Hz
Charging Time	3.5 Hours
Output Power	140W
IP Rating	IPX4
Frequency Band	2402-2483.5MHz
Maximum Transmit Power	9dBm

4


Wireless Microphone (Optional)

1) Enter Karaoke Mode

- Make sure the microphone and receiver are already paired and turned on.
- Press and hold the power button on the microphone for 2s.
- Press and hold the power button on the receiver for 2s.

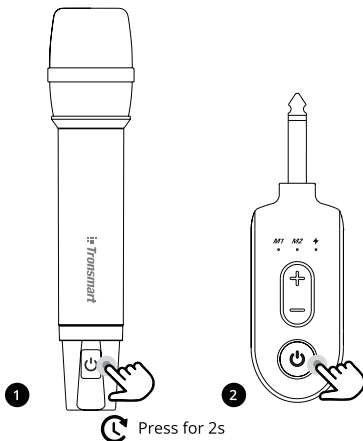

 
- The M1 receiver indicator will stay orange when connected to Mic 1 while the M2 receiver indicator stays green when connected to Mic 2.
- Plug in the receiver into speaker to enter karaoke mode.

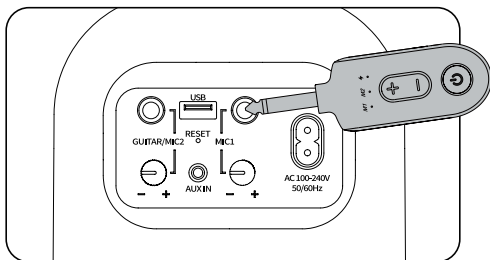

2) Pairing the Microphone with the Receiver/Speaker

If the microphone won't connect to the receiver, or the receiver light keeps blinking, please try as follows:

- Turn on both the microphone and the receiver.
- Quickly press its button 10 times on the microphone.
- Quickly press its button 10 times on the receiver.
- If pairing is successful, the LED indicators on both the microphone and receiver will stay on.

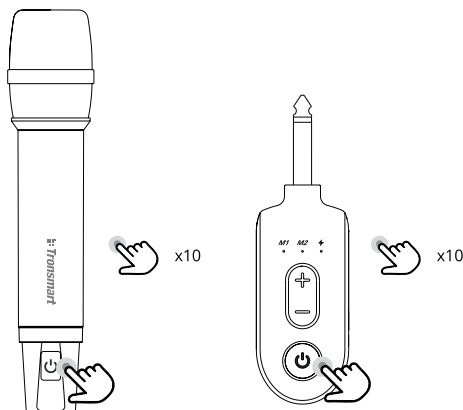

EN

Charging Indicator of Microphone

Charging	Indicator stays red
Fully Charged	Indicator off

***Note: Wireless Microphones are only available in the dual-mic version.**

Care & Maintenance

- Do not use any form of detergents or cleaning material to clean the product as any type of chemical may make this device unusable.
- Do not disassemble this product. It contains no user serviceable parts.
- Do not drop or jump on it and treat it with care for the best performance.
- Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place.
- Do not dispose this product in fire or batteries may explode or leak.

Warranty Information

Your 'Tronsmart Halo 210 Portable Party Speaker', is warranted to the original owner for 12 months from the date of purchase against defects in material and workmanship under normal use and service. Tronsmart is not responsible for the accidental use of this product and its liability will not exceed the purchase price of the product. If you have any problems while using the product, please do not hesitate to contact our customer support team at support@tronsmart.com.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Hereby, Shenzhen Geekbuy E-Commerce Co., Ltd. declares that the radio equipment type Portable Party Speaker P3030 is in compliance with Directive 2014/53/EU. The full text of the EU/UK declaration conformity is available at the following internet address:
[https://www.mediafire.com/folder/vo6mv4s1xw65k/Declaration_of_Conformity\(P3030\)-EN](https://www.mediafire.com/folder/vo6mv4s1xw65k/Declaration_of_Conformity(P3030)-EN)

Hiermit erklärt Shenzhen Geekbuy E-Commerce Co., Ltd., dass das Funkgerät vom Typ Tragbarer Party-Lautsprecher P3030 der Richtlinie 2014/53/EU entspricht. Der vollständige Wortlaut der EU/UK-Konformitätserklärung ist unter folgender Internetadresse verfügbar:
[https://www.mediafire.com/folder/jgy4djo929ylu/Declaration_of_Conformity\(P3030\)-DE](https://www.mediafire.com/folder/jgy4djo929ylu/Declaration_of_Conformity(P3030)-DE)

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.
Para maiores informações, consulte o site da ANATEL - www.gov.br/anatel/pt-br/.

EN

Shenzhen Geekbuy E-commerce Co.,Ltd.

Warehouse 101H, No.49 South WuHe Avenue, WuHe Community,
BanTian Street, LongGang District, ShenZhen, China
Email: support@tronsmart.com
800-270-1082 (USA & Canada)
+86-755-23603740 (Global)

Made in China

EC	REP
----	-----

EC REP SERVICES SL
Calle Gran Via 49,7 DCH.Madrid 28013 Spain
ecrep-service@hotmail.com
+34682797075

UK	REP
----	-----

REPLAB CONSULTING LTD
376 NEWPORT ROAD,CARDIFF,WALES
UKREP@REPLAB.CC
+44 7395577022

 ***Tronsmart***