




Tronsmart Halo 260

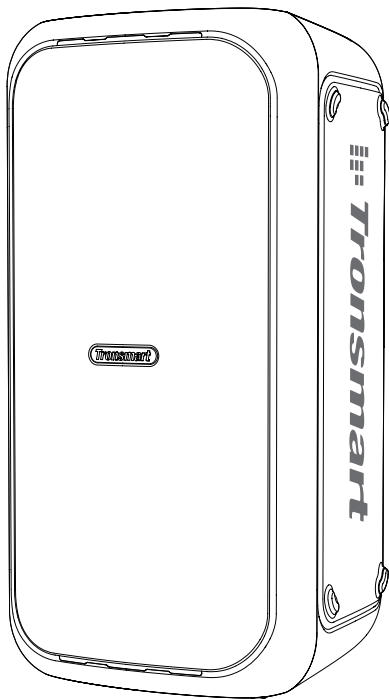

Portable Party Speaker
User Manual


Model: P3040

Thank you for purchasing the Tronsmart Halo 260 Portable Party Speaker. Please read the user manual before use and keep it handy for future reference. If you have any additional questions or comments, please contact us by email at: support@tronsmart.com.

1 Package Contents


- 1 x Tronsmart Halo 260 Portable Party Speaker
- 1 x AC Power Cord
- 1 x Quick Start Guide
- 1 x SoundPulse® Card
- 1 x Warranty Card

2 Button Configuration

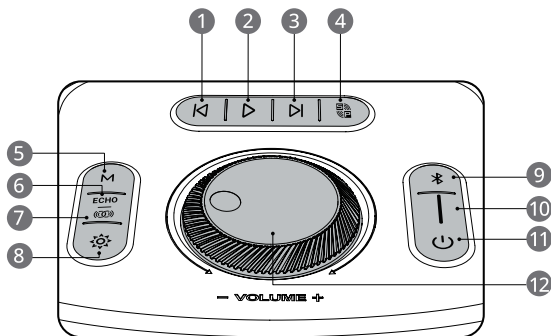

1	Previous Track	7	Stereo Pairing/Stereo Pairing Indicator
2	Play/Pause	8	Light Switch/ Light Switch Indicator
3	Next Track	9	Bluetooth/Bluetooth Indicator
4	SoundPulse EQ Button	10	Battery Level Indication

5	Mode/Mode Indicator	11	Power On/Power Off
6	Echo/Echo Indicator	12	Volume Wheel

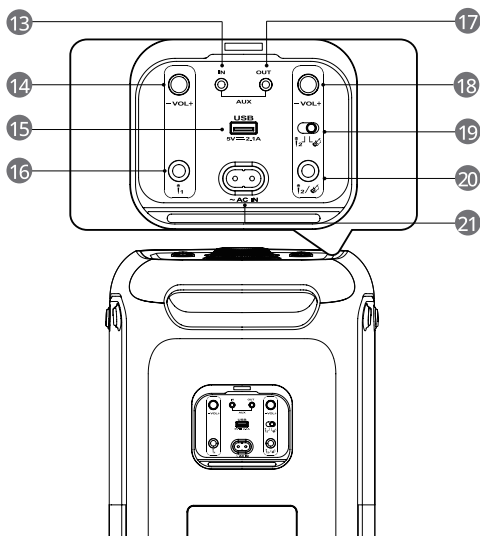


EN

13	Aux-in Port	17	Aux Out Port
14	Volume Knob for Mic 1	18	Volume Knob for Mic 2/Guitar
15	USB-A Port	19	Mic 2/Guitar Switch
16	Mic 1	20	Mic 2/Guitar Port
21	AC Charging Port		

3 How to Use

1. Turn On/Turn Off

Press for 2s to turn on/turn off.

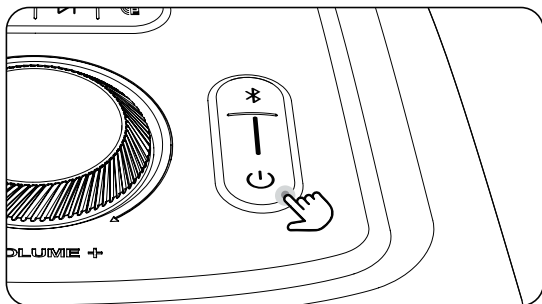



On: Press for 2s



Off: Press for 2s

2. Bluetooth Connection


Search & click 'Tronsmart Halo 260' to connect.

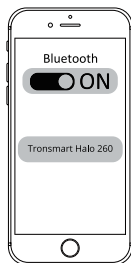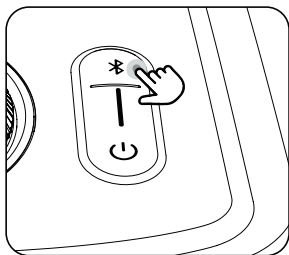

3. Enter/Exit Stereo Pairing Mode


Connect 2 Tronsmart Halo 260 speakers to enjoy powerful stereo sound.

- 1) Turn on both speakers. Please make sure either speaker has entered pairing mode.

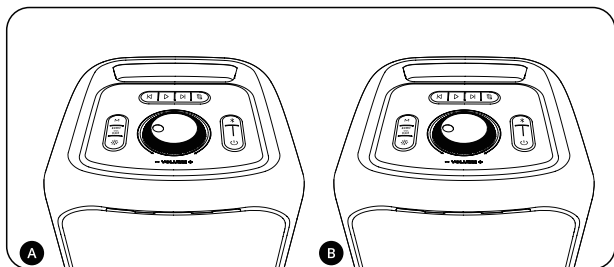


EN

- 2) Press the 'Stereo Pairing' Button for 2s on either speaker(Host Speaker) to enter stereo pairing mode, the Stereo Pairing indicator of the host speaker flashes quickly while the vice one remains off.(Press for 2s to exit)

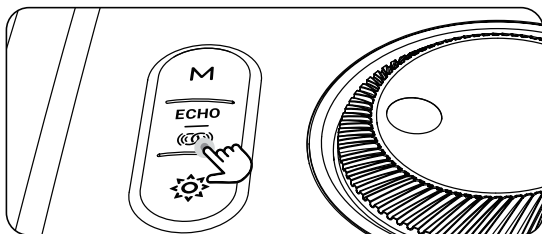

- 3) If paired successfully, the Bluetooth indicator of host speaker will flash quickly while vice one will off.
- 4) Search & click 'Tronsmart Halo 260' to connect.

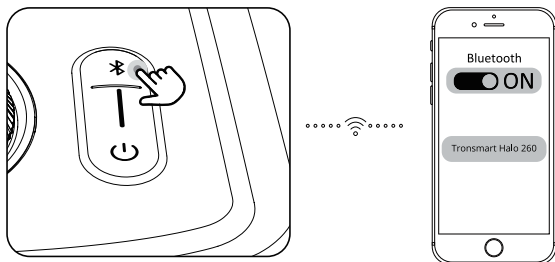

4. Operation

	Press for 2s to turn on
	Press for 2s to turn off
	Press once to switch playing modes among Bluetooth, U-disk & Aux-in in turn
	Press once to skip to next track
	Rotate clockwise to turn up volume
	Rotate counterclockwise to turn down volume
	Press once to play/pause music playing
	Press once to skip to previous track
	Press once to enter/exit SoundPulse EQ mode
	Press for 2s to enter/exit stereo pairing mode
	Press for 2s to disconnect from device
	Press for 8s to restore to factory setting.
	Press once to switch lighting modes
	Press for 2s to turn off lighting modes
ECHO	Press once to cycles through the echo modes(Echo I , Echo II & Echo III) or turn off
	Rotate clockwise to turn up mic/guitar volume
	Rotate counterclockwise to turn down mic/guitar volume
	Toggle between mic and guitar performance.

EN

5. USB-A Power Bank Function

This speaker carries an USB-A charge out function that will automatically detect your device and begin to charge it when the charging cable is plugged into the USB-A charge port. The output power is up to DC 5V/2.1A. In order to maintain stable music playing performance, it's not recommended to use the music and power bank function at the same time.

6. Aux-in Mode

Simply connect the speaker with your non-Bluetooth device via the 3.5 mm audio jack cable(not included).

Note: After plugging in an audio cable, the speaker will automatically switch to Aux-in mode.

7. USB Flash Drive Mode

The speaker will play the music from your U-disk when plugging into the slot.

8. Echo Modes

Press once to cycles through the echo modes.

Echo I , Echo II & Echo III	LED Indicator flashes white with prompt
Exit Echo modes	LED Indicator off

9. Auto Power Off

The speaker will auto-off after 30 minutes if it does not pair with any device or play any music. When on low battery, the speaker will power off automatically as well.

10. Restore to Factory Setting

Press 'Bluetooth' button for 8s.

11. Tronsmart App

Download 'Tronsmart App' via Google Play or App Store.



Apple & the Apple logo are trademarks of Apple Inc.



Google Play & the Google Play logo are trademarks of Google Inc.

How to Connect Tronsmart App?

1. Turn on Bluetooth setting on your device, search & click 'Tronsmart Halo 260' to connect.
2. Open 'Tronsmart' App & allow to access Bluetooth on your device.
3. Slide to find out 'halo 260' & click to connect.
4. If connected successfully, you could customize Equalizers, lights, etc.


12. Specifications

Model	P3040
Bluetooth Version	5.3
Audio Codec	SBC
Bluetooth Compatibility	A2DP/AVRCP
Transmission Distance	Over 15m/49ft
Frequency Range	40Hz-20KHz
Playtime(Varied by Volume Level & Audio Contents)	LED off: Up to 17 Hours (on a 50% Volume)
Battery Capacity	DC 7.2V/5100mAh
Input Power	100-240V~ 50/60Hz
Charging Time	≤4 Hours
Output Power	200W
IP Rating	IPX4
Frequency Band	2402-2480MHz
Maximum Transmit Power	9dBm

4 Wireless Microphone (Optional)


1) Enter Karaoke Mode

- Make sure the microphone and receiver are already paired and turned on.
- Press and hold the power button on the microphone for 2s.
- Press and hold the power button on the receiver for 2s.

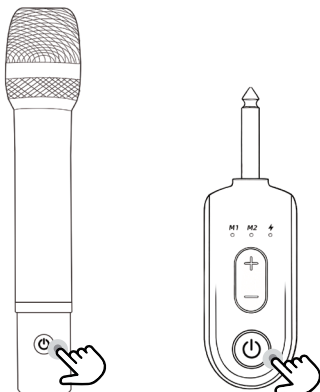

 Press for 2s


- The M1 receiver indicator will stay orange when connected to Mic 1 while the M2 receiver indicator stays green when connected to Mic 2.
- Plug in the receiver into speaker to enter karaoke mode.

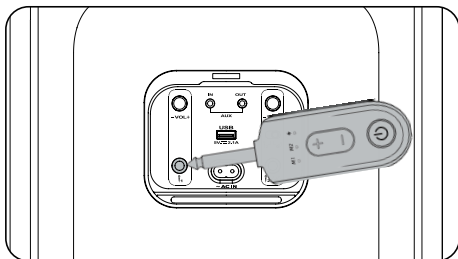

2) Pairing the Microphone with the Receiver/Speaker

If the microphone won't connect to the receiver, or the receiver light keeps blinking, please try as follows:

- Turn on both the microphone and the receiver.
- Quickly press its button 10 times on the microphone.
- Quickly press its button 10 times on the receiver.
- If pairing is successful, the LED indicators on both the microphone and receiver will stay on.

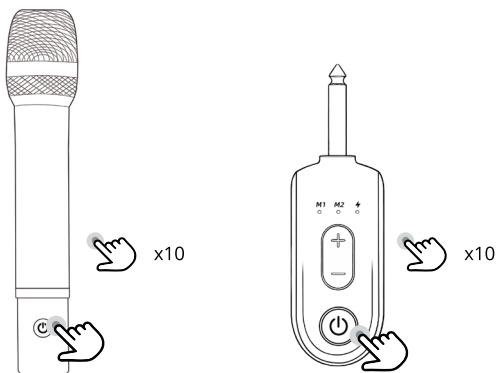

EN

Charging Indicator of Microphone

Charging	Indicator stays red
Fully Charged	Indicator off

***Note: Wireless Microphones are only available in the dual-mic version.**

Care & Maintenance

- Do not use any form of detergents or cleaning material to clean the product as any type of chemical may make this device unusable.
- Do not disassemble this product. It contains no user serviceable parts.
- Do not drop or jump on it and treat it with care for the best performance.
- Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place.
- Do not dispose this product in fire or batteries may explode or leak.

Warranty Information

Your 'Tronsmart Halo 260 Portable Party Speaker', is warranted to the original owner for 12 months from the date of purchase against defects in material and workmanship under normal use and service. Tronsmart is not responsible for the accidental use of this product and its liability will not exceed the purchase price of the product. If you have any problems while using the product, please do not hesitate to contact our customer support team at support@tronsmart.com.

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

Para maiores informações, consulte o site da ANATEL - www.gov.br/anatel/pt-br/.

Shenzhen Geekbuy E-commerce Co.,Ltd.

Warehouse 101H, No.49 South WuHe Avenue, Wuhe Community,
BanTian Street, LongGang District, ShenZhen, China

Email: support@tronsmart.com

800-270-1082 (USA & Canada)

+86-755-23603740 (Global)

Made in China



EC REP SERVICES SL
Calle Gran Via 49,7 DCH.Madrid 28013 Spain
ecrepsevice@hotmail.com
+34682797075



REPLAB CONSULTING LTD
376 NEWPORT ROAD,CARDIFF,WALES
UKREP@REPLAB.CC
+44 7395577022

 ***Tronsmart***