 




Tronsmart Mirtune C3 Plus

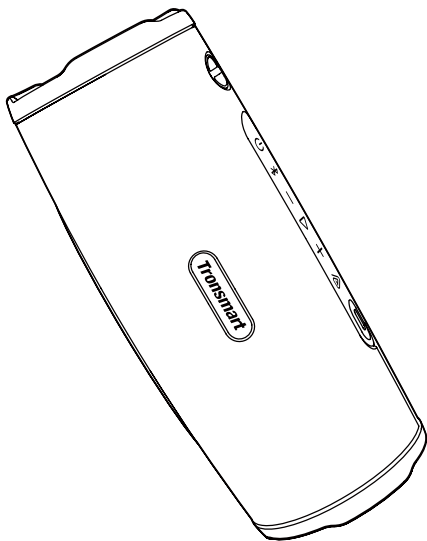

Portable Outdoor Speaker

User Manual

Thank you for purchasing the Tronsmart Mirtune C3 Plus Portable Outdoor Speaker. Please read the user manual before use and keep it handy for future reference. If you have any additional questions or comments, please contact us by email at: support@tronsmart.com.


1 Package Contents

- 1 x Tronsmart Mirtune C3 Plus Portable Outdoor Speaker
- 1 x Type-C Charging Cable
- 1 x Warranty Card
- 1 x User Manual
- 1 x Lanyard

2 Specifications

Model	Mirtune C3 Plus
Bluetooth Version	6.0
Bluetooth Profile	A2DP/AVRCP/HFP/HSP
Audio Codec	SBC
Bluetooth Range	Up to 30m/98ft (open area)
IP Rating	IPX7
Output Power	50W
Input Power	5V/2A, via Type-C port
Frequency Range	50Hz – 20kHz
Battery	DC 7.3V/2600mAh
Playtime(Varied by Volume Level & Audio Content)	Up to 12 Hours(On a 50% Volume)
Charging Time	4 Hours
Frequency Band	2402-2483.5MHz
Maximum Transmit Power	10dBm

 3 Button Configuration

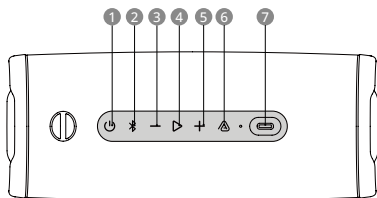

EN

1	Power On/Power Off	2	Bluetooth/Bluetooth Indicator
3	Volume - /Previous Track	4	Play/Pause
5	Volume + /Next Track	6	AuraCast/AuraCast Indicator
7	Type-C Charging Port		


4 How to Operate

	Press for 2s to turn on
	Press for 2s to turn off
	Press for 8s to reset
	Press once to switch playing modes between Bluetooth & USB-C audio mode
	Press once to disconnect from device
	Press for 3s to enter stereo pairing mode
	Press once to exit stereo pairing mode
	Press for 8s to restore to factory setting
	Press once to switch audio between speaker & phone dialing
	Press once to turn down volume
	Press for 2s to skip to previous track
	Press once to play/pause music
	Press once to answer/end a call
	Press for 2s to reject a call
	Press for 1s to enter/exit SoundPulse EQ Mode
	Double press to activate voice assistant
	Press once to turn up volume
	Press for 2s to skip to next track
	Press once to enter AuraCast broadcasting mode
	Press once to exit AuraCast broadcasting mode

5 How to Use

1. Turn On/Turn Off

 
Press for 2s to turn on/turn off.

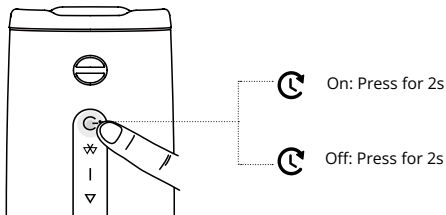

On	White Indicator On
Off	White Indicator Off

2. Bluetooth Connection

 Search & click 'Tronsmart Mirtune C3 Plus' to connect.

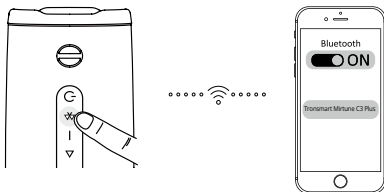

Pairing	Bluetooth Indicator Flashes
Connected	Bluetooth Indicator on

 
3. Disconnect from Bluetooth

Quickly connect to another device, you could press the 'Bluetooth' button once to disconnect from Bluetooth.


4. Enter/Exit Stereo Pairing Mode

Connect 2 Tronsmart Mirtune C3 Plus speakers to enjoy powerful stereo sound.


- 1) Turn on both speakers. Please make sure either speaker has entered pairing mode.

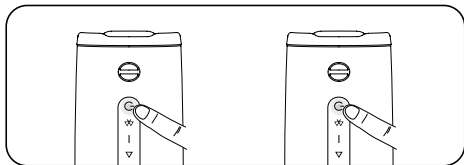

 - 2) Press the 'Bluetooth' Button for 3s on both speakers to enter stereo pairing mode, the Bluetooth indicator of the host speaker flashes quickly while the vice one stays on. (Press once to exit)

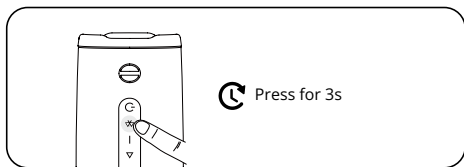


 - 3) If paired successfully, the power indicator of host speaker will stay on while vice one will off.
- 4) Search & click 'Tronsmart Mirtune C3 Plus' to connect.

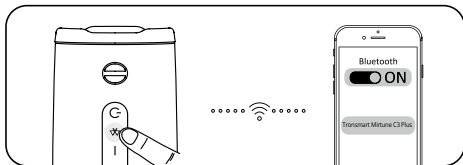


5. Dual Audio Modes

 - 1) Search & click 'Tronsmart Mirtune C3 Plus' to connect with device A.

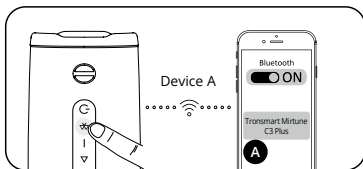


 - 2) Disconnect 'Tronsmart Mirtune C3 Plus' from the device A (Note that do not clear the pairing record on the device).

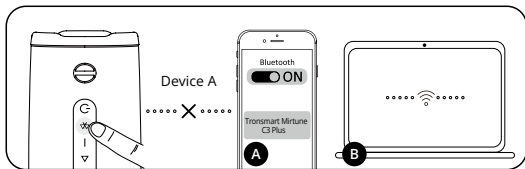


3) Tronsmart Mirtune C3 Plus will re-enter pairing mode.

 4) Search & click 'Tronsmart Mirtune C3 Plus' to connect with the device B.

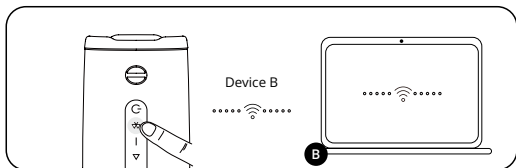


5) Click 'Tronsmart Mirtune C3 Plus' on device A to connect.

 EN

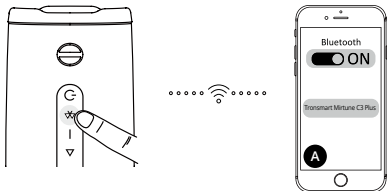

6. AuraCast Mode

 With one speaker connected to a device, press the AuraCast button on Tronsmart speakers with AuraCast function to synchronize audio.

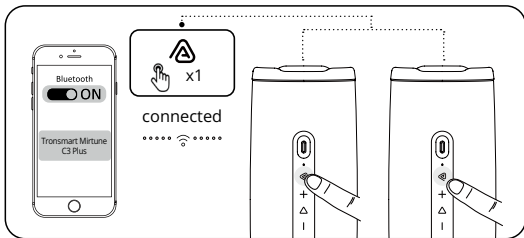

	Press Once	Enter/Exit AuraCast Mode
	Stays White	AuraCast Pairing/Connected
	Stays Blue	Host Speaker (AuraCast Connected)
	Indicator Off	Vice Speaker (AuraCast Connected)
	Press 'Bluetooth' Button Once on Vice Speaker	Exit AuraCast Mode and Re-enter Bluetooth Pairing Mode

7. Indicators

Charging Indicator Flashes red	Battery Low
Charging Indicator Stays Red	Charging
Charging Indicator Off	Fully-charged

8. Restore to Factory Setting

Press 'Bluetooth' button for 8s.

9. Auto Power Off

The speaker will auto-off after 30 minutes if it does not pair with any device or play any music. When on low battery, the speaker will power off automatically as well.

10. Type-C Lossless Audio

For true lossless audio, connect your PC directly to the Mirtune C3 Plus with a attached USB-C cable.

Tronsmart App

Download 'Tronsmart App' via Google Play or App Store.



Apple & the Apple logo are trademarks of Apple Inc.



Google Play & the Google Play logo are trademarks of Google Inc.

How to Connect Tronsmart App?

1. Turn on Bluetooth setting on your device, search & click 'Tronsmart Mirtune C3 Plus' to connect.
2. Open 'Tronsmart' App & allow to access Bluetooth on your device.
3. Slide to find out 'Mirtune C3 Plus' & click to connect.
4. If connected successfully, you could customize Equalizers, lights, etc.

Care & Maintenance

- Do not use any form of detergents or cleaning material to clean the product as any type of chemical may make this device unusable.
- Do not disassemble this product. It contains no user serviceable parts.
- Do not drop or jump on it and treat it with care for the best performance.
- Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place.
- Do not dispose this product in fire or batteries may explode or leak.

Warranty Information

Your 'Tronsmart Mirtune C3 Plus Portable Outdoor Speaker', is warranted to the original owner for 12 months from the date of purchase against defects in material and workmanship under normal use and service. Tronsmart is not responsible for the accidental use of this product and its liability will not exceed the purchase price of the product. If you have any problems while using the product, please do not hesitate to contact our customer support team at support@tronsmart.com.

 ***Tronsmart***