Tronsmart

USER MANUAL

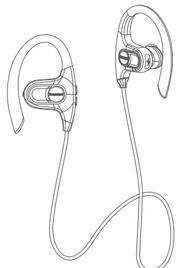

Encore Hydra
Wireless Headphones

Thank you for purchasing Tronsmart Encore Hydra Bluetooth Headphones. Tronsmart Encore Hydra is equipped with Bluetooth 4.1 for optimal connection & pairing with your Bluetooth enable device.

FEATURES

· IPX7 rated: With IPX7 rated waterproof, it's a perfect companion while working out.
· Hi-Fi sound: 4 customized speakers inside the headphones provide HiFi sound.
· CVC6.0 Noise Canceling Technology: CVC6.0 Noise Cancelling Function blocks the unwanted noise from the environment and provides clean calls.
· Up to 12hours playtime and up to 15hours of talking time.
· Bluetooth 4.1: Compatible with all Bluetooth enabled devices, offers great connectivity and compatibility.
· Secure ear hook for a firm grip: Lightweight ear hook design and a range of earbuds ensure a flexible and perfect fit for any ear.

PACKAGE CONTENTS

Encore Hydra Headphones
Micro-USB charging cable
Pouch
2 X Ear buds
User manual
Warranty card

BUTTON CONFIGURATION

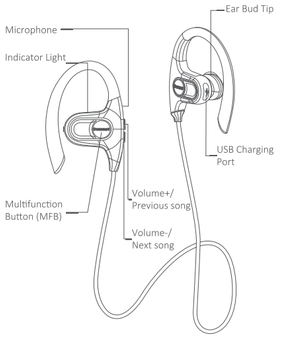

SPECIFICATION

Model	Encore Hydra
Bluetooth	4.1
Frequency range	2.401GHz ~ 2.482GHz
Driver	Φ8mmx2 and Φ6mmx2
Receive sensitivity	92dB
Bluetooth mode	headset/handfree/A2DP/AVRCP/AAC
Operating range	up to 33 feet (10 m)
Talking time	up to 15hours
Playing time	up to 12hours
Standby time	up to 200 hours
Charge voltage	DC 5V

FUNCTIONS

Power on	Long press the" MFB " button until the Blue indicator light flashes.
Pairing mode	When the headset is off, press and hold the " MFB " until the red and blue lights flash alternately. It turn to blue light if it's paired successfully
Power off	With the headset power on, long press the " MFB" button for 3 seconds, the red indicator light flashes 2 seconds and goes off.
Charging	The red light reminds solid when charging, red light turns blue light, the charging is completed.
Answering a call	Press the answer key on your phone or short press the" MFB " button on your headset.
Ending a call	Press the end key on your phone or short press the " MFB " button on your headset.
Rejecting a call	Press the end key on your phone or long press the " V+" button for 2 seconds on your headset.
Redialing the last called number	Double press the " MFB" button when headset is in standby mode.
Play/Pause	When you are listening to the music from the headset, you can short press the " MFB " button to play and pause.
Previous/Next Track	Previous Track when press the " V-" 2 seconds. Next Track when press the "V+" 2 seconds.
Volume control	Volume will be up when short press the "V+" and will be down when short press the "V-" .
Microphone muting	During a call, press " V-" for about 2 seconds, microphone is muted; press " V-" again for about 2 seconds it will work again.

CARE & MAINTENANCE

Please keep this manual handy for future reference. To clean the 'Tronsmart Encore Hydra Bluetooth Headphones' use a lightly dampened cloth in water to clean the exterior in-case it gets dirty. Do not use any form of detergents or cleaning material to clean this headphone, any type of chemical may make this device unusable. Do not disassemble this product. It contains no user serviceable parts. Do not drop or jump on it, treat it with care for the best performance. Keep the headphones in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the headphone if kept at an unfriendly place. Do not dispose this product in fire, batteries may explode or leak.

WARRANTY INFORMATION

Your 'Tronsmart Encore Hydra Wireless Headphones' is warranted to the original owner for 1 year from the date of purchase against defects in material and workmanship under normal use and service. Should your headphones prove defective within 1 year from the date of purchase, return the defective part or unit, freight prepaid along with an explanation of the claim. Please pack your headphones carefully to avoid damages in transit. Under this warranty, Tronsmart will repair or replace any parts found to be defective due to manufacturer's defect. This warranty extends only to personal use and does not extend to any product that has been used for commercial use, rental use, or use which is not intended. There are no warranties other than that expressly set forth herein. This warranty is not transferable. Tronsmart is not responsible in any way for damages, losses or inconveniences caused by equipment failure or user negligence, abuse, or use not in accordance with the 'User Manual' or any additional safety, use, or warnings included in the product materials. Further, Tronsmart is not liable for incidental or consequential damages of any nature resulting from the use of this product and any liability shall not exceed the purchase price of the product.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

THIS WARRANTY DOES NOT APPLY TO THE FOLLOWING

Damage due to accident, misuse, abuse, alterations or vandalism.
Improper or inadequate maintenance.
Unauthorized modifications or commercial use.
Damage in return transit.
Unsupervised use by children under 18 years of age.

(Tronsmart™ and its subsidiaries assume no liability for damage caused by the use of the Encore Hydra Bluetooth Headphones other than for its intended use or as instructed above in the User Manual.)

Tronsmart

SHENZHEN VALUE IN ACTION TECHNOLOGY CO., LTD.
A3 Hekan Industrial Building, 41# Wuhe Avenue,
Bantian, Longgang District, 518129 Shenzhen, China
Email:support@tronsmart.com
800-270-1082 (USA & Canada)
+86-755-23603740 (Global)

www.tronsmart.com

Made in China